


Wind Direction Sensors


Wilmers 0315

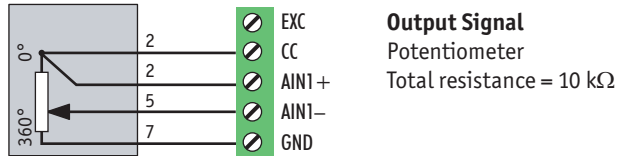

Standard Setup

Input: **AIN1**
Functions: **WindDir (°) = Direction 360..0 + 123**
with '123' = offset to magnetic North


Wilmers 0318

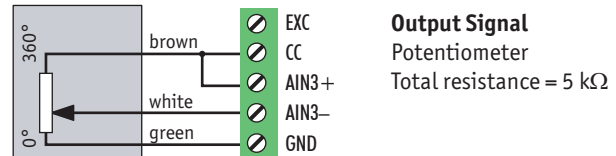

Standard Setup

Input: **AIN3**
Functions: **WindDir (°) = Direction 0..360 + 123**
with '123' = offset to magnetic North


Wilmers 0323 - Thies 4.3150.10.212

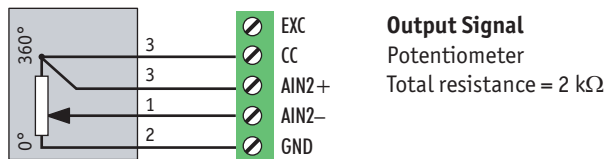

Standard Setup

Input: **AIN2**
Functions: **WindDir (°) = Direction 0..360 + 123**
with '123' = offset to magnetic North


NRG #200P

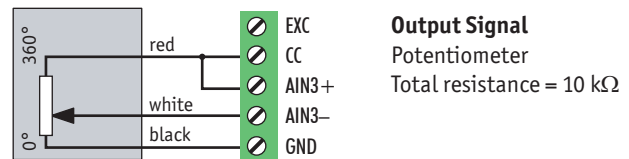

Standard Setup

Input: **AIN3**
Functions: **WindDir (°) = Direction 0..360 + 123**
with '123' = offset to magnetic North


Thies 4.3129.10.712

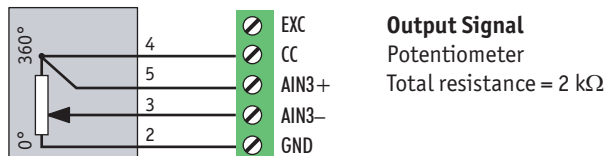

Standard Setup


Input: **AIN3**
Functions: **WindDir (°) = Direction 0..360 + 123**
with '123' = offset to magnetic North

Thies 4.3129.10.012A

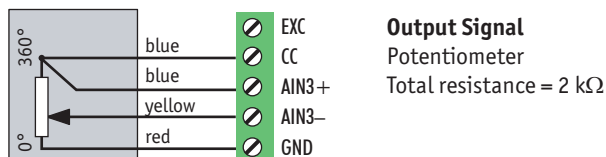

Standard Setup

Input: **AIN3**
Functions: **WindDir (°) = Direction 0..360 + 123**
with '123' = offset to magnetic North

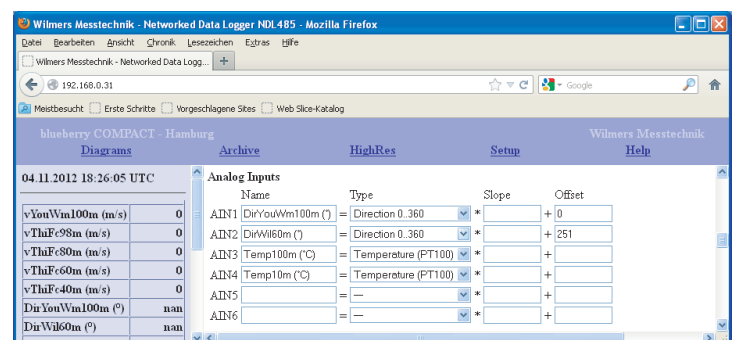

Further infos about the
blueberry COMPACT:



For further details please see the data logger manual or visit <http://wilmers.com/blueberry-compact>.

File: 0141-blueberry-COMPACT-Sensor Connections-(Wind Direction)

© 2013-08-19 Technical data subject to change without notice - Wilmers Messtechnik GmbH - Hamburg - Germany - www.wilmers.com