

Radiation Sensors


Wilmers 0890 - LSI Lastem DPA154 - Kipp & Zonen CMP6



Standard Setup

Input: **AIN5**
Functions: **GlobalRad (W/m²) = Voltage * 66667**
(replace slope by individual sensitivity from calibration sheet)


LI-COR LI-200SA

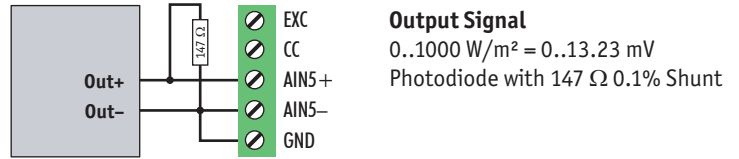

Standard Setup


Input: **AIN5**
Functions: **GlobalRad (W/m²) = Voltage * 75586**

Wilmers 0862

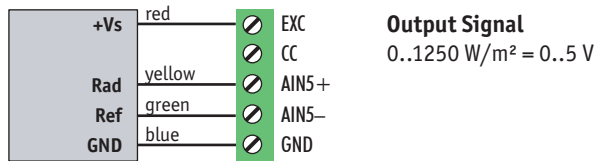

Standard Setup

Input: **AIN5**
Functions: **GlobalRad (W/m²) = Voltage * 250**

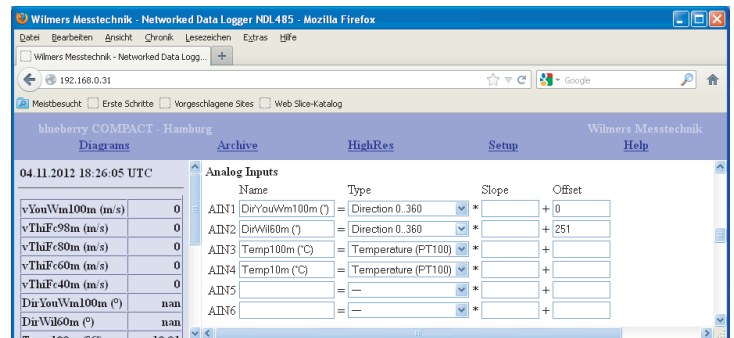

Further infos about the
blueberry COMPACT:



For further details please see the data logger manual or visit <http://wilmers.com/blueberry-compact>.

File: 0141-blueberry-COMPACT-Sensor Connections-(Radiation)

© 2013-08-20 Technical data subject to change without notice - Wilmers Messtechnik GmbH - Hamburg - Germany - www.wilmers.com